

WALL TILES
Installation guide


900 SERIES - Edition 06/2026
Format: 400 × 800 × 4.0 mm - SPC Core - Tongue & Groove - Adhesive-bonded
Reference standard: EN 13245-2:2009 - Reaction to fire: C-s2,d0 - Waterproof

BEFORE YOU START

1. WALL AND SURFACE PREPARATION


Correct wall preparation is essential for a flawless installation and a valid warranty. Complete every step below before fitting the first tile.

1.1 PREPARATION TOOLS

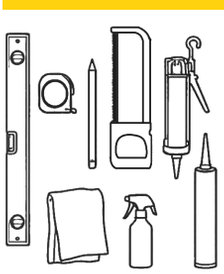

- Spirit level
- Measuring tape
- Pencil
- Saw
- Caulk gun
- Cloth
- Alcohol
- MS polymer panel adhesive


1.2 WALL REQUIREMENTS

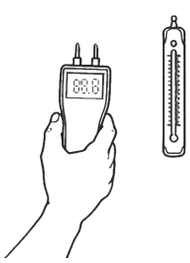

Wall moisture must not exceed 2%. If higher, dehumidify or apply suitable moisture-proof measures.

Room temperature 15–25°C for 24 hours before, during and after installation.

1.3 CLEAN THE SURFACE

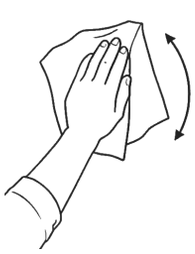

- Wall must be dry, dust-free and clean of grease or glue residue.
- Wipe with a damp cloth or mild cleaner.
- Check flatness with a spirit level; sand or fill uneven areas.
- Vacuum to remove all dust.


STANLEY® and the STANLEY logo are registered trademarks of Stanley Black & Decker Inc. and are used under licence. All rights reserved.

Imported and distributed by Area Floors, Kiezel Kleine Brogel 57, 3990 Peer, Belgium.
www.areafloors.com.tr/stanley

STANLEY®

WALL TILES
Installation guide

1.4 CALCULATE LAYOUT

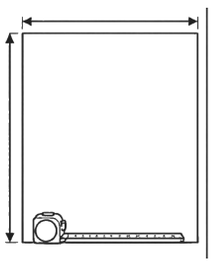


- Measure height × width. Add 10% for cutting waste.
- Determine tile direction (horizontal or vertical).
- Mark row lines with pencil and spirit level.
- Each end tile at least 5 cm wide.

1.5 ACCLIMATISE 48 HOURS




Leave tiles in their box at room temperature for 48 hours.

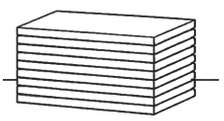

Check every panel for damage before installation.

INSTALLATION

2.1 LOCKING SYSTEM

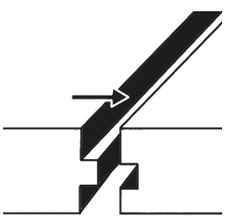


Tiles use Tongue & Groove locking.

Push tiles flat against each other to join easily.

No tools or angling required.


2.2 ROW DIRECTION & PATTERN

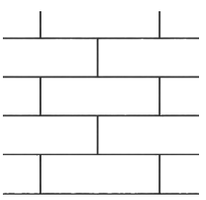

Install along the longest wall or light source for the best visual result.

Stagger tiles by at least 30 cm to avoid a stair-step look.

2.3 STARTING ROW

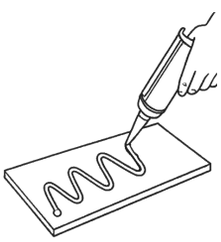


Start from a corner with groove sides facing away from the walls.

Apply adhesive in a zigzag pattern on the back of the first tiles.

Use a level to ensure the row is straight.

2.4 FIRST ROW

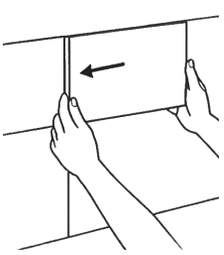


Push the long-edge tongue of the next tile into the long-edge groove of the first, and press to the wall.

Continue placing tiles end-to-end, applying adhesive to each.

Lock each tile to the previous one, then press against the wall.

2.5 SECOND ROW

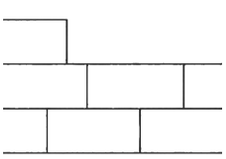


Start with a half-length tile to stagger the rows.

Apply adhesive and lock tiles onto the row below.

Continue with full-size tiles; reuse leftover pieces to reduce waste.

2.6 CONTINUING ROWS

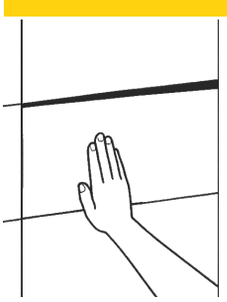

Always apply adhesive in a zigzag pattern.

Push tiles into place and press firmly against the wall.

Maintain a minimum 5 cm start-row width.

STANLEY® and the STANLEY logo are registered trademarks of Stanley Black & Decker Inc. and are used under licence. All rights reserved.

Imported and distributed by Area Floors, Kiezel Kleine Brogel 57, 3990 Peer, Belgium. www.areafloors.com.tr/stanley

WALL TILES
Installation guide

CUTTING AND TRIMMING

3.1 TILE CUTTING




Measure and mark the cutting line.

Straight cuts: score with a sharp concave cutter knife, design facing up; snap the tile in two.

Shaped cuts: use a jigsaw, sabre saw or handsaw as appropriate.


3.2 AROUND PIPES

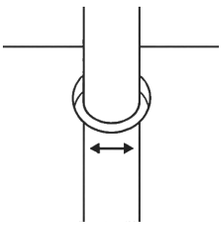

Join two tiles at the pipe centre.


Drill a hole 20 mm larger than the pipe diameter.

3.3 EDGE TILES

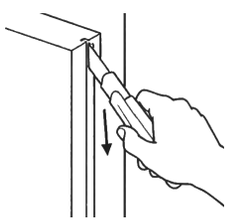


Cut the locks on the wall-edge profiles to avoid a poor appearance at the wall edges.

FINAL STEPS

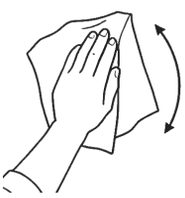

Once installation is complete, wipe the surface clean with a damp cloth. **No grout required.**

RECOMMENDED ADHESIVE

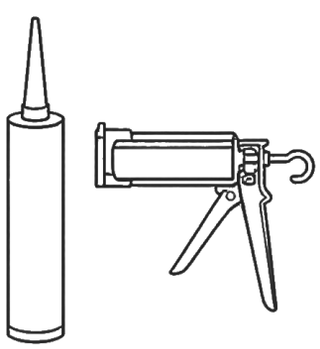

Use a solvent-free, MS-polymer-based adhesive with:

- Strong initial tack and elastic bonding
- Non-sag performance for vertical application
- Moisture resistance, suitable for humid areas
- Low emission, certified for indoor air quality
- Temperature stability between -40°C and +90°C

STANLEY® and the STANLEY logo are registered trademarks of Stanley Black & Decker Inc. and are used under licence. All rights reserved.

Imported and distributed by Area Floors, Kiezel Kleine Brogel 57, 3990 Peer, Belgium. www.areafloors.com.tr/stanley